











 







 
 



















 











Original	Recharge	Original	Recharge
Power		Power	
Picture		Picture / Format	
AV input		AV / Input / RDS	
Input Tv		TV/Radio /	
Menu		Menu / Home	
Text		Text / Goto	
STTL		Subtitle / EQ	
APPS		Display / Media	
i		Info / Angle	
X/Exit		Exit / Cancel / Clear	
Home		Shift + Menu /	
Guide		Guide / EPG / -/--	
Netflix		Shift + Red / Netflix /	
Option		Setup / OPT /	
Return/Back		Back / Return	
Up		Up	
Down		Down	
		Right	
		Left	
		OK	
		Red	
		Green	
		Yellow	
		Blue	
		Mute	
		Vol+	
		Vol-	
		CH+	
		CH-	
		1	
		2	
		3	
		4	
		5	



Original	Recharge	Original	Recharge
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Last View	 Fav / Marker / PC		
?/eHelp	 Audio / Lang I/II		
My APP	 +  Shift + Green / APP /		
<<	 << / Tune-		
Play	 Play / Slow		
>>	 >> / Tune+		
I<<	 I<< / Preset-		
Pause	 Pause / Step / Freeze		
>>I	 >>I / Preset+		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		

