









 







 



 


Original	Rechange
Display	Display / Media
Eject	Eject / Surround
On/Standby	Power
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7
8	8
9	9
TRK Up	Vol+
I.Select	Yellow / YouTube / Repeat
0	0

Original	Rechange
Count.RST	Red / Netflix / Search
TRK Down	Vol-
F.ADV	Text / Goto
Index	Info / Angle
Count.TR	Green / APP / Repeat
CLR/RST	Exit / Cancel / Clear
Menu	Menu / Home
Rec	Rec / Rec Mode
Timer Rec	Sleep / Timer
Play/Up	Play / Slow
Play/Up	Up
<</Left	Left
<</Left	<< / Tune-
>>/Right	Right
>>/Right	>> / Tune+
I>/Slow	Shift + Play /
Stop/Down	Stop / Hold





Original	Rechange	Original	Rechange
 Stop/Down	 Down		
 Pause/Still/OK	 Pause / Step / Freeze		
 Pause/Still/OK	 OK		
 SP/LP	 Setup / OPT /		
 Prog.	 TV/Radio /		
 Audio	 Audio / Lang I/II		
 Tv/Video	 Smart / List		
 A.Dub	 Sound / Title		
 SAT/Moni.	 D.Menu / Top		
 Cont.Sat.	 Zoom / Size		
 Picture	 Picture / Format		

