



 



 



 










 




 

















 



 

















 










































Original		Recharge		Original		Recharge	
	Power		Power		0/AV		AV / Input / RDS
	TV/VCR		TV/Radio /		Display		Info / Angle
	DVD		Shift + 2		Setup / Menu		Setup / OPT /
	CH/Page+		CH+ / Page+		Setup / Menu		Menu / Home
	1		1		Up / Green		Up
	2		2		Up / Green		Green / APP / Repeat
	3		3		Mute		Mute / Dimmer
	CH/Page-		CH- / Page-		Left / Red		Left
	4		4		Left / Red		Red / Netflix / Search
	5		5		Enter/Text/Mix/TV		OK
	6		6		Enter/Text/Mix/TV		Text / Goto
	Vol+		Vol+		Right / Blue		Right
	7		7		Right / Blue		Blue / Prime Video / Random
	8		8		DVD Menu		D.Menu / Top
	9		9		Down / Yellow		Down
	Vol-		Vol-		Down / Yellow		Yellow / YouTube / Repeat
	0/AV		0		Cancel / F/T/B		Exit / Cancel / Clear





Original	Recharge
	
<<	<< / Tune-
	
Play	Play / Slow
	
>>	>> / Tune+
	
TRK/Skip-/l<<	l<< / Preset-
	
TRK/Skip-/>>l	>>l / Preset+
	
Stop	Stop / Hold
	
Pause/Still	Pause / Step / Freeze
	
Rec/Otr	Rec / Rec Mode
	 + 
Timer Rec	Shift + Sleep / Timer
	
Index/Sub page	Smart / List
	 + 
Slow	Shift + Pause / Step /
	 + 
Repeat	Shift + Yellow / YouTube /
	 + 
Repeat	Shift + TV/Radio / Program
	
Jump/Hold/SP/L	Picture / Format
	 + 
Angle/Counter	Shift + Info / Angle
	
Subtitle/Zero return	Subtitle / EQ
	
Zoom/Reveal	Zoom / Size

Original	Recharge
	
Title/ATR	Sound / Title
	
Return	Back / Return
	
Play Mode/Quick View	Display / Media
	
Sleep	Sleep / Timer
	
Audio	Audio / Lang I/II
	 + 
Eject	Shift + Eject / Surround
	
Open/Close	Eject / Surround

