


















 



Original	Recharge
TV	TV/Radio /
TV	+ Shift + 1
VT	Text / Goto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0	0
-/-	Guide / EPG / -/-
Red	Red / Netflix / Search

Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Mute	Mute / Dimmer
><	Pause / Step / Freeze
Dis	Display / Media
00:00	Rec / Rec Mode
VT-	Down
VT+	Up
A	D.Menu / Top
P-	CH- / Page-
P+	CH+ / Page+
↻	Back / Return
Vol-	Vol-
Vol+	Vol+
[=+]	Stop / Hold
[=>]	>> / Tune+





Original	Recharge	Original	Recharge
	?		Play / Slow
	[>=]		<< / Tune-
	F-		Left
	F+		Right
	[-]		Info / Angle
	[◇]		Zoom / Size
	→		Smart / List
	C		Exit / Cancel / Clear
	M		Menu / Home
	Lock		Setup / OPT /

