



Original		Rechange		Original		Rechange	
	Power		Power		Page Down		Shift + CH- /
	Mute		Mute / Dimmer		Fav		Fav / Marker / PC
	1		1		Info		Info / Angle
	2		2		Up / CH+		CH+ / Page+
	3		3		Up / CH+		Up
	4		4		Left / Vol-		Vol-
	5		5		Left / Vol-		Left
	6		6		OK		OK
	7		7		Right / Vol+		Vol+
	8		8		Right / Vol+		Right
	9		9		Menu		Menu / Home
	Timer		Sleep / Timer		Down / CH-		Down
	0		0		Down / CH-		CH- / Page-
	Game		Smart / List		Exit		Exit / Cancel / Clear
	Page Up		Shift + CH+ /		Red / Scan		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Green / Zoom		Zoom / Size
	Recall		Back / Return		Green / Zoom		Green / APP / Repeat





Original	Rechange
Yellow / Pause	Shift + Pause / Step /
Yellow / Pause	Yellow / YouTube / Repeat
Blue / TV/Radio	TV/Radio /
Blue / TV/Radio	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Subtl	Subtitle / EQ
TXT	Text / Goto
<<	<< / Tune-
>>	>> / Tune+
Play/Pause	Pause / Step / Freeze
Play/Pause	Play / Slow
Rec	Rec / Rec Mode
I<<	I<< / Preset-
>>I	>>I / Preset+
Slow	Shift + Play /
Stop	Stop / Hold

Original	Rechange

