



Original	Rechange
Power	Power
Mute	Mute / Dimmer
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Recall	Back / Return
Exit	Exit / Cancel / Clear
List	Smart / List
APP	Shift + Green / APP / Repeat

Original	Rechange
EPG	Guide / EPG / -/--
OPT	Setup / OPT /
OK	OK
Up	Up
Down	Down
Left	Left
Right	Right
Vol+	Vol+
Vol-	Vol-
CH/Page+	CH+ / Page+
CH/Page-	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Text	Text / Goto
Sub	Subtitle / EQ





Original	Rechange	Original	Rechange
 MENU	Menu	 HOME MENU	Menu / Home
 i	i	 ANGLE INFO	Info / Angle

