



Original	Recharge
Power	Power
Mute	Mute / Dimmer
USB/Media 1	Display / Media
USB/Media 1	Shift + 8
Play/Pause/Text	Text / Goto
Play/Pause/Text	Play / Slow
Play/Pause/Text	Pause / Step / Freeze
Stop/Index	Stop / Hold
Rec/Media2	Rec / Rec Mode
Rec/Media2	Shift + Display / Media
I<</Hold	I<< / Preset-
>>I/Size	>>I / Preset+
<</S. Page	<< / Tune-
>>/Reveal	>> / Tune+
I-II/Nicam	Shift + Picture / Format
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ

Original	Recharge
Tv/Radio	TV/Radio /
i	Info / Angle
Sleep	Sleep / Timer
Source	AV / Input / RDS
Menu	Menu / Home
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
Mouse	Shift + OK
Smart	Smart / List
Exit	Exit / Cancel / Clear
CH+	CH+ / Page+
EPG	Guide / EPG / -/-
VOL+	Vol+
CH-	CH- / Page-





Original	Recharge
Open/Close	Eject / Surround
Vol-	Vol-
D.Setup	Setup / OPT /
Picture	Picture / Format
D.Menu	D.Menu / Top
Sound	Sound / Title
D.Title	Shift + Sound / Title
P.Size	Zoom / Size
D.Prog	Shift + TV/Radio / Program
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
FAV	Fav / Marker / PC
0	0
Recall	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

