



Original	Recharge
Standby	Power
Open / Close	Eject / Surround
Prog	TV/Radio /
Shuffle	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Title	Shift + Sound / Title
Display	Display / Media
Zoom	Zoom / Size
Menu	Menu / Home
Setup	Setup / OPT /
Return	Back / Return
Up	Up
Left / AM	Left
Select	OK
Right / FM	Right
Down	Down

Original	Recharge
Play/Pause	Play / Slow
Stop	Stop / Hold
I<< Skip / Tune-	I<< / Preset-
I<< Skip / Tune-	Shift + I<< /
Skip >>I / Tune+	Shift + I>> / Preset+
Skip >>I / Tune+	Shift + I>> /
<< Search	<< / Tune-
Search >>	>> / Tune+
Volume+	Vol+
Speaker	D.Menu / Top
Test Tone	Text / Goto
Volume-	Vol-
Mute	Mute / Dimmer
Sound Effects	Sound / Title
Subtitle	Subtitle / EQ
Mode	Smart / List
Audio	Audio / Lang I/II





Original	Recharge	Original	Recharge
ANGLE	Angle	ANGLE	Info / Angle
SEARCH MODE	Search Mode	NETFLIX SEARCH	Red / Netflix / Search
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
+10	+10	GUIDE EPG	Guide / EPG / -/--
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
0	0	HDMI - BAT	0

