



 

 

 


 












Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Sleep	 Sleep / Timer
	 Shift + 1
	 Shift + 2
 CH.List	 Smart / List

Original	Rechange
 Source	 AV / Input / RDS
 Up	 Up
 Audio / Nicam	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 Mouse On/Off	 D.Menu / Top
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Home	 Shift + Menu /
 CH-	 CH- / Page-
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title





Original	Rechange
 Display	 Display / Media
 Fav	 Fav / Marker / PC
 TXT	 Text / Goto
 Sub / Index	 Subtitle / EQ
 EPG / S. Page	 Guide / EPG / -/-
 Size	 Zoom / Size
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Hold / Aspect	 Setup / OPT /
 Hold / Aspect	 Shift + Stop /
 Play / Pause	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 Reveal / Antena	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Rechange
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

