



















































 














 




Original		Rechange		Original		Rechange	
	Power		Power		Volume+		Vol+
	Rec		Rec / Rec Mode		Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze		CH/PG+		CH- / Page-
	Stop		Stop / Hold		Volume-		Vol-
	<<		<< / Tune-		CH/PG-		CH+ / Page+
	Play		Play / Slow		Recorded TV		Display / Media
	>>		>> / Tune+		Guide		Guide / EPG / -/--
	I<		I<< / Preset-		Live TV		TV/Radio /
	>I		>>I / Preset+		Format / DVD		D.Menu / Top
	Back		Back / Return		1		1
	Start (Windows)		Smart / List		2		2
	i More		Info / Angle		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Original	Recharge	Original	Recharge
9 WXYZ	9	BLUETOOTH 9	9
*	*	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-
0	0	HDMI - BAT 0	0
#	#	SHIFT + FAV MARKER	Shift + Fav / Marker / PC
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
[T]	[T] Teletext	GOTO TEXT	Text / Goto
ENTER	Enter	PC FAV MARKER	Fav / Marker / PC
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random

Original	Recharge

