





















 











 



 























 



 





Original	Recharge	Original	Recharge
 Power	 Power	 Vol+	 Vol+
 Energy Saving	 Sleep / Timer	 FAV/Mark/Char/Nu	 Fav / Marker / PC
 AV Mode	 Picture / Format	 P+	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 Tv/Rad	 TV/Radio /	 3D	 Zoom / Size
 1	 1	 Mute/Delete	 Mute / Dimmer
 2	 2	 P-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 NetCast	 Sound / Title
 5	 5	 Q.Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Exit	 Exit / Cancel / Clear
 Q.Vlew	 Setup / OPT /	 Back	 Back / Return





Original	Rechange	Original	Rechange
GUIDE	Guide		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
L/R SELECT	Blue/L/R/Select		Blue / Prime Video / Random
	Text		Text / Goto
T.OPT	T.Opt		Shift + Setup / OPT / Tools
SUBTITLE	Subtitle		Subtitle / EQ
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Simplink		Display / Media
INFO	Info		Info / Angle
AD	AD		Audio / Lang I/II
APP/*	APP/*		Shift + Green / APP / Repeat

