

















 

































 












Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Energy Saving		Sleep / Timer		Vol+		Vol+
	Energy Saving		Sleep / Timer		Vol+		Vol+
	AV Mode		Picture / Format		P+		CH+ / Page+
	Input		AV / Input / RDS		Vol-		Vol-
	Tv/Rad		TV/ Radio /		3D		Zoom / Size
	1		1		Mute/Delete		Mute / Dimmer
	2		2		P-		CH- / Page-
	3		3		Menu		Menu / Home
	4		4		NetCast		Sound / Title
	5		5		Q.Menu		D.Menu / Top
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	List		Smart / List		Down		Down
	0		0		Exit		Exit / Cancel / Clear
	Q.Vlew		Setup / OPT /		Back		Back / Return



