













 






















Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 Freeze	 Shift + Pause / Step /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/--	 Shift + Guide / EPG / --/--
 0	 0

Original	Recharge
 Recall	 Back / Return
 Fav+	 Shift + Right
 Fav	 Fav / Marker / PC
 Fav-	 Shift + Left
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Info	 Info / Angle
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Recharge	Original	Recharge
CH+ / CH	CH+ / Page+	TV/Radio	TV/Radio /
P.Mode	Picture / Format	T-Shift	Smart / List
Vol+	Vol+	Rec	Rec / Rec Mode
CH-	CH- / Page-	EPG	Guide / EPG / -/--
S.Mode	Sound / Title		
Vol-	Vol-		
Play/Pause / Text	Play / Slow		
Play/Pause / Text	Pause / Step / Freeze		
Play/Pause / Text	Text / Goto		
<< / Index	<< / Tune-		
>> / Mix	>> / Tune+		
Stop / Reveal	Stop / Hold		
I<< / Hold	Shift + Stop /		
I<< / Hold	I<< / Preset-		
>>I / Subpage	>>I / Preset+		
Sub-T	Subtitle / EQ		
Cancel	Shift + Exit / Cancel / Clear		

