 




Original		Recharge		Original		Recharge	
	Power		Power		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Rec		Rec / Rec Mode
	DVD		Shift + 2		0		0
	VCR		Shift + 4		AV Input		AV / Input / RDS
	Eject/Open-Close		Eject / Surround		Vol- Tv		Vol-
	AV Input Tv		Shift + AV / Input / RDS		<< Scan		<< / Tune-
	1		1		Scan >>		>> / Tune+
	2		2		I<< Skip		I<< / Preset-
	3		3		Skip >>I		>>I / Preset+
	PR+ Tv		Shift + CH+ /		Pause/Step		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR- Tv		Shift + CH- /		PR/TRK+		CH+ / Page+
	7		7		Up		Up
	8		8		Menu/List		D.Menu / Top
	9		9		Left		Left





Original	Recharge	Original	Recharge
 Enter	 OK		
 Right	 Right		
 Return	 Back / Return		
 Down	 Down		
 PR/TRK-	 CH- / Page-		
 Display	 Display / Media		
 Audio	 Audio / Lang I/II		
 Title	 Sound / Title		
 Marker	 Fav / Marker / PC		
 Clear	 Exit / Cancel / Clear		
 Red/FAV	 Red / Netflix / Search		
 Green/Repeat	 Green / APP / Repeat		
 Yellow/Subtitle	 Yellow / YouTube / Repeat		
 Blue/Text	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 Dubbing	 Picture / Format		

