



 

 










Original	Recharge
 Power	 Power
 Picture	 Picture / Format
 TV Input	 Audio / Lang I/II
 AV Input	 TV/Radio /
 Menu	 Menu / Home
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 List/Provider	 AV / Input / RDS
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Home	 Shift + Menu /
 Netflix	 Shift + Red / Netflix /
 Left	 Left
 Up	 Up
 Right	 Right
 Guide	 Guide / EPG / -/--
 OK	 OK

Original	Recharge
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge		Original		Recharge	
	6		TUNER 6	6			
	7		AUX - HDD 7	7			
	8		USB 8	8			
	9		BLUETOOTH 9	9			
	?/eHelp		SHIFT + ANGLE INFO	Shift + Info / Angle			
	0		HDMI - BAT 0	0			
	Last View		PC FAV MARKER	Fav / Marker / PC			
	<<		TUNE-	<< / Tune-			
	Play		SLOW	Play / Slow			
	>>		TUNE+	>> / Tune+			
	<<		PRESET-	<< / Preset-			
	Pause		STEP - FREEZE	Pause / Step / Freeze			
	>>		PRESET+	>> / Preset+			
	My App		SIZE ZOOM	Zoom / Size			
	Stop		HOLD	Stop / Hold			
	REC		REC MODE	Rec / Rec Mode			

