

 

 



 









	Original	Rechange	Original	Rechange
	Line 1	 Power		
	Line2	 Mute / Dimmer		
	Balanced	 Play / Slow		
	Tape1	 Pause / Step / Freeze		
	Tape 2	 Stop / Hold		
	Phono	 Rec / Rec Mode		
	Source Direct On/Off	 << / Tune-		

