





















 

 

 
 

 

 

 

 

 

 

 



 








 


 

 







 








| Original   | Rechange  | Original   | Rechange  |
|--|---|--|---|
|  Timer              |  +  Shift + Sleep / Timer |  7              |  7   |
|  Sleep              |  Sleep / Timer   |  8              |  8   |
|  Clock              |  Setup / OPT /   |  9              |  9   |
|  Edit/Remain        |  Zoom / Size   |  0              |  0   |
|  PRGM               |  TV/Radio /  |  +10            |  Guide / EPG / -/-   |
|  Random             |  +  Shift + Blue / Prime  |  BBE            |  Audio / Lang I/II   |
|  Repeat / Mono      |  +  Shift + Green / APP / |  GEQ MANU       |  CH- / Page-   |
|  Disc Direct Play 1 |  Left  |  Karaoke        |  Text / Goto   |
|  Disc Direct Play 2 |  Up  |  T-Bass         |  Sound / Title   |
|  Disc Direct Play 3 |  Right   |  GEQ PRGM       |  CH+ / Page+   |
|  Open/Close       |  Eject / Surround  |  GEQ PRGM     |  Subtitle / EQ   |
|  1                |  1   |  DSP PRGM     |  Smart / List  |
|  2                |  2   |  CD           |  Red / Netflix / Search  |
|  3                |  3   |  CD           |  +  Shift + 3 |
|  4                |  4   |  <> Direction |  Play / Slow   |
|  5                |  5   |  Video/AUX    |  +  Shift + 4 |
|  6                |  6   |  Video/AUX    |  Green / APP / Repeat  |





| Original      | Recharge                    | Original | Recharge |
|---------------|-----------------------------|----------|----------|
| Video/AUX     | Shift + 7                   |          |          |
| I<</Down/<<   | << / Tune-                  |          |          |
| I<</Down/<<   | I<< / Preset-               |          |          |
| >>/Up/>>I     | >>I / Preset+               |          |          |
| >>/Up/>>I     | >> / Tune+                  |          |          |
| Tuner/Band    | Yellow / YouTube / Repeat   |          |          |
| Tuner/Band    | Shift + 6                   |          |          |
| Rec/Rec Mute  | Rec / Rec Mode              |          |          |
| Stop          | Stop / Hold                 |          |          |
| Pause         | Pause / Step / Freeze       |          |          |
| Tape/Deck 1/2 | Shift + 5                   |          |          |
| Tape/Deck 1/2 | Blue / Prime Video / Random |          |          |
| Power         | Power                       |          |          |
| Volume Down   | Vol-                        |          |          |
| Volume Up     | Vol+                        |          |          |
|               |                             |          |          |
|               |                             |          |          |
|               |                             |          |          |
|               |                             |          |          |

