






Original		Recharge		Original		Recharge	
	Standby	+	Shift + Power		Tune	+	Shift + 6
	On		Power		USB	+	Shift + 8
	HDMI	+	Shift + 0		M-XP	+	Shift + Guide / EPG / -/--
	Zone A		Sound / Title		Input Up		CH+ / Page+
	Zone B		Audio / Lang I/II		Setup		Setup / OPT /
	A/D		Red / Netflix / Search		Mute		Mute / Dimmer
	ATT		Green / APP / Repeat		Volume+		Vol+
	SPKR A-B		Yellow / YouTube / Repeat		Input Down		CH- / Page-
	7.1		Blue / Prime Video / Random		Display		Display / Media
	BD	+	Shift + 5		Surr		Eject / Surround
	DVD	+	Shift + 2		Volume-		Vol-
	VCR	+	Shift + 4		Top		Smart / List
	DSS	+	Shift + 9		Up		Up
	TV	+	Shift + 1		Info		Info / Angle
	CD	+	Shift + 3		Left		Left
	CDR	+	Shift + Fav / Marker / PC		Enter		OK
	AUX	+	Shift + 7		Right		Right



 

 







 





 

 





 



 

 

 

 

 

 

 







 

 

 

 

 

 

 



 

 



Original	Rechange
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 HT EQ	 Guide / EPG / -/--
 Auto	 1
 Stereo	 2
 P.Direct	 3
 Sleep	 Sleep / Timer
 Sleep	 4
 M-Dax	 5
 EQ	 6
 EQ	 Subtitle / EQ
 LIP Sync	 7
 Night	 8
 T.Tone	 Text / Goto
 CH Sel	 0
 V-Off	 9

Original	Rechange
 Treble-	 I<< / Preset-
 Treble+	 >>I / Preset+
 CH-	 Shift + CH- /
 Bass-	 << / Tune-
 CH+	 Shift + CH+ /
 Bass+	 >> / Tune+

 

 





 



 





 

 















 





 

 



 

 

 

 

 





Original	Recharge	Original	Recharge
 Power	 Power	 >>	 >> / Preset+
 Setup	 Setup / OPT /	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Volume+	 Vol+	 1	 1
 Display	 Display / Media	 2	 2
 Volume-	 Vol-	 3	 3
 Up	 Up	 Repeat	 Green / APP / Repeat
 Left	 Left	 4	 4
 Enter	 OK	 5	 5
 Right	 Right	 6	 6
 Menu	 Menu / Home	 Random	 Blue / Prime Video / Random
 Down	 Down	 7	 7
 Memo	 Smart / List	 8	 8
 Pause	 Pause / Step / Freeze	 9	 9
 Play	 Play / Slow	 CLR	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 0	 0
 I<<<	 I<<< / Preset-	 +10	 Guide / EPG / -/-





Original		Rechange		Original		Rechange	
	Power		Power		2		2
	Mute		Mute / Dimmer		3		3
	Volume+		Vol+		4		4
	Display		Display / Media		5		5
	Volume-		Vol-		6		6
	Tune+		>> / Tune+		7		7
	Info		Info / Angle		8		8
	Preset-		I<< / Preset-		9		9
	Enter		OK		CLR		Exit / Cancel / Clear
	Preset+		>>I / Preset+		0		0
	Menu		Menu / Home		CAT-		CH- / Page-
	Tune-		<< / Tune-		CAT+		CH+ / Page+
	Memo		Smart / List				
	T.Mode		Text / Goto				
	P.Scan		D.Menu / Top				
	Band		Setup / OPT /				
	1		1				

