







Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze
 Mode	 Picture / Format
 PRE	 Back / Return

Original	Rechange
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Tv/Radio	 TV/Radio /
 Down	 Down
 Tv/SAT	 Smart / List
 P-	 CH- / Page-
 UHF	 Display / Media
 FAV	 Fav / Marker / PC
 P+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat








	Original	Recharge	Original	Recharge
	Blue/Teletext		Blue / Prime Video / Random	
	Blue/Teletext		Text / Goto	







Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze
 Mode	 Picture / Format
 PRE	 Back / Return

Original	Rechange
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 TV/Radio	 TV/Radio /
 Down	 Down
 TV/SAT	 Smart / List
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / Teletext	 Blue / Prime Video / Random
 Blue / Teletext	 Text / Goto

