

























 

 















 





 





 















Original	Rechange	Original	Rechange
 Mute	 Mute / Dimmer	 0	 0
 Prog	 TV/Radio /	 10+	 Guide / EPG / -/-
 Display	 Display / Media	 Time	 Sleep / Timer
 TFT On/Off	 Power	 Up	 Up
 N/P	 Smart / List	 Setup	 Setup / OPT /
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 3	 3	 Right	 Right
 Subtitle	 Subtitle / EQ	 Step	 Pause / Step / Freeze
 4	 4	 Down	 Down
 5	 5	 Function	 D.Menu / Top
 6	 6	 Menu/PBC	 Menu / Home
 Language	 Audio / Lang I/II	 Title	 Sound / Title
 7	 7	 Repeat	 Green / APP / Repeat
 8	 8	 A-B	 Yellow / YouTube / Repeat
 9	 9	 Return	 Back / Return
 Angle	 Info / Angle	 L/R	 Text / Goto





Original	Recharge	Original	Recharge
	Zoom		Zoom / Size
	Slow		Shift + Play /
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	Vol-		Vol-
	Vol+		Vol+

Original	Recharge

