






 




























Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 PMode	 Picture / Format
 SMode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0

Original	Rechange
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Shift + Pause / Step /
 Auto/Goto	 Shift + Text /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Recharge
 CH+ <small>CH</small>	 CH+ / Page+ <small>CH PAGE</small>
 Media <small>MEDIA</small>	 Shift + Display / Media <small>SHIFT + MEDIA DISPLAY</small>
 Vol+ <small>VOL</small>	 Vol+ <small>VOL</small>
 CH- <small>CH</small>	 CH- / Page- <small>CH PAGE</small>
 Text <small>TEXT</small>	 Text / Goto <small>GOTO TEXT</small>
 Vol- <small>VOL</small>	 Vol- <small>VOL</small>
 Hold <small>HOLD</small>	 Shift + Stop / <small>SHIFT + HOLD</small>
 Reveal <small>REVEAL</small>	 Setup / OPT / <small>OPT-TOOLS SETUP</small>
 Size <small>SIZE</small>	 Zoom / Size <small>SIZE ZOOM</small>
 Index <small>INDEX</small>	 Smart / List <small>LIBT SMART</small>
 S.Title <small>S.TITLE</small>	 Subtitle / EQ <small>EQ SUBTITLE</small>
 S.Page <small>S.PAGE</small>	 Eject / Surround <small>SURROUND</small>
 Play <small>PLAY</small>	 Play / Slow <small>SLOW</small>
 Pause <small>PAUSE</small>	 Pause / Step / Freeze <small>STEP-FREEZE</small>
 FAV <small>FAV</small>	 Fav / Marker / PC <small>PC FAV MARKER</small>
 << <small>FAV</small>	 << / Tune- <small>TUNE-</small>
 >> <small>FAV</small>	 >> / Tune+ <small>TUNE+</small>

Original	Recharge
 Stop	 Stop / Hold <small>HOLD</small>
 I<<	 I<< / Preset- <small>PRESET-</small>
 >>I	 >>I / Preset+ <small>PRESET+</small>

