



















 
 
 





 











| Original  | Recharge  |
|---|---|
|  Power       |  Power                         |
|  Picture     |  Picture / Format              |
|  TV Input    |  TV/Radio /                    |
|  AV Input    |  AV / Input / RDS              |
|  Netflix     |  Shift + Red / Netflix /       |
|  Rakuten Tv  |  D.Menu / Top                  |
|  Prime video |  Shift + Blue / Prime          |
|  Youtube     |  Shift + Yellow / YouTube /    |
|  My App      |  Shift + Green / APP /         |
|  Apps        |  Sleep / Timer                 |
|  Red        |  Red / Netflix / Search       |
|  Green     |  Green / APP / Repeat        |
|  Yellow    |  Yellow / YouTube / Repeat   |
|  Blue      |  Blue / Prime Video / Random |
|  Menu      |  Menu / Home                 |
|  Home      |  Shift + Menu /              |
|  Guide     |  Guide / EPG / -/-           |

| Original  | Recharge  |
|---|---|
|  i             |  Info / Angle            |
|  Exit          |  Exit / Cancel / Clear   |
|  Up            |  Up                      |
|  Left          |  Left                    |
|  OK            |  OK                      |
|  Right         |  Right                   |
|  Option        |  Setup / OPT /           |
|  Down          |  Down                    |
|  Back          |  Back / Return           |
|  List/Provider |  Smart / List            |
|  Voice        |  Display / Media        |
|  Scenery     |  Zoom / Size           |
|  I<</<<      |  << / Tune-            |
|  Play        |  Play / Slow           |
|  >>/>>I      |  >> / Tune+            |
|  Stop        |  Stop / Hold           |
|  Pause       |  Pause / Step / Freeze |





| Original | Recharge  | Original | Recharge          |
|----------|-----------|----------|-------------------|
|          | REC       |          | Rec / Rec Mode    |
|          | Vol+      |          | Vol+              |
|          | Mute      |          | Mute / Dimmer     |
|          | CH+       |          | CH+ / Page+       |
|          | Vol-      |          | Vol-              |
|          | Text      |          | Text / Goto       |
|          | CH-       |          | CH- / Page-       |
|          | STTL      |          | Subtitle / EQ     |
|          | 1         |          | 1                 |
|          | 2         |          | 2                 |
|          | 3         |          | 3                 |
|          | 4         |          | 4                 |
|          | 5         |          | 5                 |
|          | 6         |          | 6                 |
|          | 7         |          | 7                 |
|          | 8         |          | 8                 |
|          | 9         |          | 9                 |
|          | ?/eHELP   |          | Eject / Surround  |
|          | 0         |          | 0                 |
|          | Last View |          | Fav / Marker / PC |

