







 









Original	Rechange
 Power	 Power
 AV	 AV / Input / RDS
 Eject	 Eject / Surround
 TTX	 Text / Goto
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 T.Rec / Mix	 OK
 Display / Reveal	 Display / Media
 Red / OTR	 Red / Netflix / Search
 Green / T.Speed	 Green / APP / Repeat
 Auto Trak+ / L/F	 >>I / Preset+
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Auto Trak- / Subcode	 I<< / Preset-
 Index	 Info / Angle
 Left	 Left
 Right	 Right

Original	Rechange
 Rec	 Rec / Rec Mode
 C/Clear	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Play	 Play / Slow
 << Rew	 << / Tune-
 P/Still / Hold	 Pause / Step / Freeze
 P/Still / Hold	 Shift + Stop /
 FF >>	 >> / Tune+
 Stop	 Stop / Hold
 Vol-	 Vol-
 Vol+	 Vol+
 PR/Page-	 CH- / Page-
 PR/Page+	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 4	 4





	Original	Recharge		Original	Recharge
5	5	TAPE 5	5		
6	6	TUNER 6	6		
7	7	AUX - HDD 7	7		
8	8	USB 8	8		
9	9	BLUETOOTH 9	9		
Q.V/ADD	Q.V/Add	OPT-TOOLS SETUP	Setup / OPT /		
0	0	HDMI - BAT 0	0		
TV MON	TV Mon / Size	LIST SMART	Smart / List		
TV MON	TV Mon / Size	SIZE ZOOM	Zoom / Size		

