



Original		Rechange	
	Tuner		6
	CD		3
	I<</Down		I<< / Preset-
	>>I/Up		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	M-Up/Repeat		Green / APP / Repeat
	Memory/Clock		Sleep / Timer
	Stop		Stop / Hold
	Mute		Mute / Dimmer
	Band		TV/Radio /
	Power		Power
	Volume-		Vol-
	Volume+		Vol+

Original		Rechange	

