
 

 

 





| Original | Rechange | Original | Rechange |
|---|---|----------|----------|
|  Power |  Power | | |
|  Vol- |  Vol- | | |
|  Vol+ |  Vol+ | | |
|  Play |  Play / Slow | | |
|  Pause |  Pause / Step / Freeze | | |
|  I<< |  I<< / Preset- | | |
|  >>I |  >>I / Preset+ | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

