 



 





 



 









 















 



 



 



 













 
























 

 

 




Original		Recharge		Original		Recharge	
	Power		Power		0		0
	Eject		Eject / Surround		Setup		Setup / OPT /
	Angle		Info / Angle		Up		Up
	Repeat		Shift + Green / APP /		CH+		CH+ / Page+
	Q-Play		D.Menu / Top		Return		Back / Return
	Search		Shift + Red / Netflix /		Left		Left
	1		1		Enter		OK
	2		2		Right		Right
	3		3		PgUp/Title		Sound / Title
	List/PBC		Smart / List		CH-		CH- / Page-
	4		4		Down		Down
	5		5		PgDn/Menu		Menu / Home
	6		6		EPG/P/N		Guide / EPG / -/-
	Zoom		Zoom / Size		Exit/Slow		Exit / Cancel / Clear
	7		7		Info/Display		Display / Media
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-





	Original		Recharge
	Tv/Radio		TV/Radio /
	TTX		Text / Goto
	FAV/A-B		Fav / Marker / PC
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	L<<		L<< / Preset-
	>>L		>>L / Preset+
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	<<		<< / Tune-
	>>		>> / Tune+
	Blue		Blue / Prime Video / Random

	Original		Recharge
	Video		Shift + 4
	USB		Shift + 8
	DVD/DVB		Shift + 2
	Random		Shift + Blue / Prime

