






































 
















 









 












Original		Rechange		Original		Rechange	
	Aper / Chiuso		Eject / Surround		8		8
	Video / Y		AV / Input / RDS		9		9
	Power		Power		Prog		TV/Radio /
	OSD		Display / Media		Intro		Smart / List
	PBC		D.Menu / Top		0		0
	Titolo		Sound / Title		10+		Guide / EPG / -/-
	Menu		Menu / Home		Pausa		Pause / Step / Freeze
	Ricerca		Red / Netflix / Search		Info / Play		Play / Slow
	1		1		Info / Play		Info / Angle
	2		2		Up		Up
	3		3		Left		Left
	Repeticione		Green / APP / Repeat		Setup		Setup / OPT /
	4		4		Right		Right
	5		5		Ritorno		Back / Return
	6		6		Down		Down
	A-B RPT		Yellow / YouTube / Repeat		Stop		Stop / Hold
	7		7		<I Ralent		CH- / Page-





Original	Recharge	Original	Recharge
 Ralent I>	 CH+ / Page+		
 << F.REV	 << / Tune-		
 >> F.FWD	 >> / Tune+		
 Step	 Shift + Pause / Step /		
 Zoom	 Zoom / Size		
 I<< Prec	 I<< / Preset-		
 >>I Succ	 >>I / Preset+		
 Sottotitoli	 Subtitle / EQ		
 NTSC/PAL	 Picture / Format		
 Volume-	 Vol-		
 Volume+	 Vol+		
 SLEEP	 Sleep / Timer		
 Track	 Text / Goto		
 Audio	 Audio / Lang I/II		
 Muto	 Mute / Dimmer		

