

















 












 
















 


 



 








 







Original		Rechange		Original		Rechange	
	Aper / Chiuso		Eject / Surround		8		8
	Video / Y		AV / Input / RDS		9		9
	Power		Power		Prog		TV/Radio /
	OSD		Display / Media		Intro		Smart / List
	PBC		D.Menu / Top		0		0
	Titolo		Sound / Title		10+		Guide / EPG / -/-
	Menu		Menu / Home		Pausa		Pause / Step / Freeze
	Ricerca		Red / Netflix / Search		Info / Play		Play / Slow
	1		1		Info / Play		Info / Angle
	2		2		Up		Up
	3		3		Left		Left
	Repeticione		Green / APP / Repeat		Setup		Setup / OPT /
	4		4		Right		Right
	5		5		Ritorno		Back / Return
	6		6		Down		Down
	A-B RPT		Yellow / YouTube / Repeat		Stop		Stop / Hold
	7		7		< Ralent		CH- / Page-



