













































Original	Rechange	Original	Rechange
PWR On/Off	 Power	Menu Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
H/V Play	 Play / Slow	Menu Left	 Left
Dec/Pause	 Pause / Step / Freeze	Menu Right	 Right
East	 Rec / Rec Mode	Clear	 Exit / Cancel / Clear
Tune-	 << / Tune-	Menu Down	 Down
Tune+	 >> / Tune+	Volume+	 Vol+
West	 I<< / Preset-	TV/SAT	 Smart / List
Audio	 Audio / Lang I/II	CH/Page+	 CH+ / Page+
View	 Picture / Format	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Display	 Display / Media
TV/SAT	 TV/Radio /	CH/Page-	 CH- / Page-
Erase	 D.Menu / Top	1. ?	 1
SAT Sky	 Setup / OPT /	2abc	 2
Help	 Text / Goto	3def	 3
TV	 AV / Input / RDS	4ghi	 4
Store	 Menu / Home	5jkl	 5



Original	Recharge	Original	Recharge
6mno	 6		
7pqrm	 7		
8tuv	 8		
9wxyz	 9		
Guide Pilote	 Guide / EPG / -/--		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
TV	 +  Shift + 1		
Video	 +  Shift + 4		

