


 



 


 












 




 










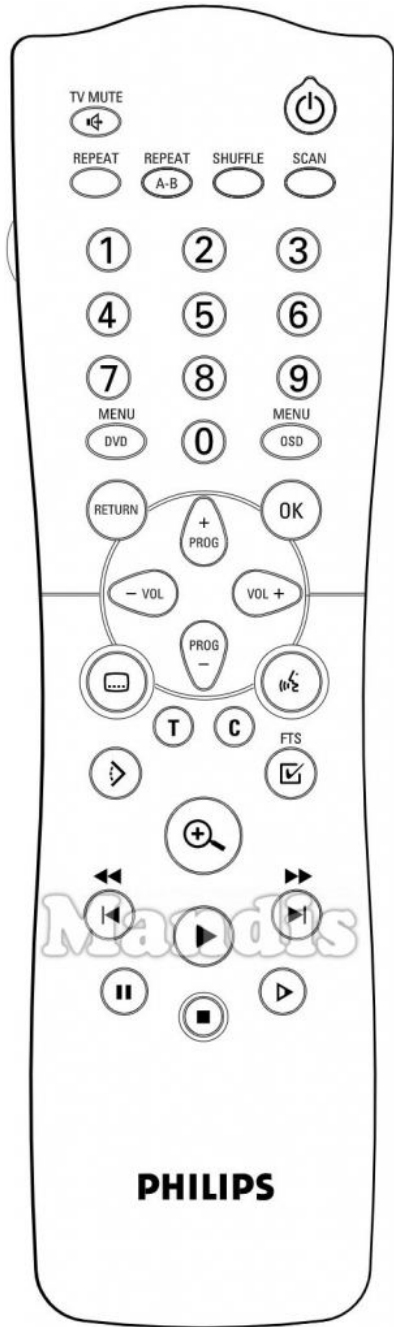 


 

 


 

 

 

 




 
 








Original		Rechange		Original		Rechange	
	Power		Power		Return		Back
	Repeat		Text		Up		Up
	A-B Repeat		Options		P+		Ch +
	Shuffle		AV		OK		Ok
	Scan		Smart		Left		Left
	1		1		Vol-		Vol -
	2		2		Right		Right
	3		3		Vol+		Vol +
	4		4		[...]		Subt
	5		5		Down		Down
	6		6		P-		Ch -
	7		7		Audio		Dual
	8		8		T-C		TV/R
	9		9		Angle		Format
	DVD Menu		D. Menu		Zoom		Eject
	0		0		<<		<<
	OSD Menu		Menu		I<		I<<





	Original	Recharge	Original	Recharge
	Power			Down
	1			I<<
	2			I<<
	3			>>I
	4			>>I
	5			Stop
	6			
	7			
	8			
	9			
	0			
	Up			
	OK			
	Vol -			
	Left			
	Vol +			
	Right	