







 











 

 












 




 

 





	Original	Recharge		Original	Recharge
	Power		Power		Right / >>
	OPTICAL		8		Right / >>
	OPTICAL		4		Bass-
	Mute		Mute / Dimmer		Vol-
	AUX		7		Vol-
	AUX		1		Down
	BT		9		Bass+
	BT		2		Flat
	HDMI ARC		0		Movie
	HDMI ARC		3		Music
	Vol+		Vol+		
	Vol+		Up		
	Left /  <<		Left		
	Left /  <<		<< / Preset-		
	Play/Pause / Pair		OK		
	Play/Pause / Pair		Pause / Step / Freeze		
	Play/Pause / Pair		Play / Slow		

