



Original	Rechange
 Power	 Power
 Language	 Audio / Lang I/II
 Menu	 Menu / Home
 Open/Close	 Eject / Surround
 Goto	 Text / Goto
 Angle	 Info / Angle
 Prog	 Shift + TV/Radio / Program
 PBC	 Smart / List
 1	 1
 2	 2
 3	 3
 N/P	 TV/Radio /
 4	 4
 5	 5
 6	 6
 R/L	 Sleep / Timer
 7	 7

Original	Rechange
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 10/0	 0
 10+	 Guide / EPG / -/-
 Step	 Shift + Pause / Step /
 V-Mode	 Picture / Format
 USB	 Shift + 8
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Title	 Sound / Title
 Return	 Back / Return
 OSD	 Display / Media
 Slow	 Shift + Play /
 Zoom	 Zoom / Size
 Setup	 Setup / OPT /
 Up	 Up





	Original	Recharge		Original	Recharge
	Subt	Subtitle / EQ			
	Left				
	Enter				
	Right				
	Pause	Pause / Step / Freeze			
	Down				
	Mute	Mute / Dimmer			
	Stop	Stop / Hold			
	<<	<< / Tune-			
	>>	>> / Tune+			
	Vol+	Vol+			
	Play	Play / Slow			
	I<<	I<< / Preset-			
	>>I	>>I / Preset+			
	Vol-	Vol-			

