













 








 



 



 




 










 















Original	Rechange
 PTY	 Smart / List
 RDS/Display	 Display / Media
 Stereo/Mono	 Audio / Lang I/II
 Power	 Power
 Intro	 Fav / Marker / PC
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Timer Set	 Menu / Home
 1	 1
 2	 2
 3	 3
 Timer On/Off	 Guide / EPG / -/--
 4	 4
 5	 5
 6	 6
 Sleep	 Sleep / Timer
 7	 7

Original	Rechange
 8	 8
 9	 9
 EQ/X-Bass	 Setup / OPT /
 0	 0
 Program	 TV/Radio /
 File Search	 Red / Netflix / Search
 Mute	 Mute / Dimmer
 Left	 Left
 I<</Search Skip/Tuning -	 I<< / Preset-
 Up	 Up
 Volume Up	 Vol+
 Enter	 OK
 >>I/Search Skip/Tuning +	 >>I / Preset+
 Right	 Right
 Volume Down	 Vol-
 Down	 Down
 Tuner/Band/US	 Shift + 6





Original	Recharge	Original	Recharge
 Tape/Mode	 Shift + 5		
 CD	 Shift + 3		
 Rec	 Rec / Rec Mode		
 Reverse/Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Play/Pause	 Play / Slow		
 Down/P.Call-	 CH- / Page-		
 Up/P.Call+	 CH+ / Page+		

Original	Recharge

