 

 
 


 

 






 


 

 

 












 

 
 




Original	Rechange
 Tv/Rad	 TV/Radio /
 Input/Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute / Dimmer
 Back	 Back / Return
 Red	 Red / Netflix / Search
 Opt.	 Setup / OPT /
 Green	 Green / APP / Repeat

Original	Rechange
 A/V+	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat
 FAV	 Fav / Marker / PC
 Blue/A-Z	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/-
 Info	 Info / Angle
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 List	 Smart / List





Original	Rechange
 I>/Slow	 Display / Media
 A-B	 Shift + Yellow / YouTube /
 Mark	 Shift + Fav / Marker / PC
 PIP	 Zoom / Size
 Jump	 Picture / Format
 Movie	 Eject / Surround
 Up	 Up
 Swap	 D.Menu / Top
 Down	 Down
 Right	 Right
 Left	 Left
 1 TV	 Shift + 1
 2 TV	 Shift + 2
 3 TV	 Shift + 3
 4 TV	 Shift + 4
 5 TV	 Shift + 5
 6 TV	 Shift + 6

Original	Rechange
 7 TV	 Shift + 7
 8 TV	 Shift + 8
 9 TV	 Shift + 9
 0 TV	 Shift + 0
 Mute TV	 Shift + Mute / Dimmer
 Input/Text TV	 Shift + Text /
 P+ TV	 Shift + CH+ /
 P- TV	 Shift + CH- /
 Vol-	 Vol-
 Vol- TV	 Shift + Vol-
 Sleep	 Sleep / Timer
 Power Tv	 Shift + Power
 Vol+ TV	 Shift + Vol+
 Power	 Power
 OK	 OK
 Vol+	 Vol+

