





 





Original	Recharge
Open/Close	Eject / Surround
Mute	Mute / Dimmer
DVD	Shift + 2
Tuner	Shift + 6
AUX 1	Red / Netflix / Search
AUX 2	AV / Input / RDS
N/P	Exit / Cancel / Clear
Subtitle	Subtitle / EQ
Language	Audio / Lang I/II
Angle	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Recharge
8	8
9	9
+10	Guide / EPG / -/--
0	0
Time	Sleep / Timer
Title	Sound / Title
Prog	Shift + TV/Radio / Program
CH Set	Smart / List
Volume+	Vol+
Menu	Menu / Home
Display	Display / Media
Slow	Shift + Play /
Volume -	Vol-
FM Mode	TV/Radio /
Pre / Tun	Picture / Format
Up	Up
Left	Left





	Original	Rechange	Original	Rechange
		Enter		OK
		Right		Right
		Setup		Setup / OPT /
		Down		Down
		Repeat		Green / APP / Repeat
		2.1/5.1		D.Menu / Top
		Step		Shift + Pause / Step /
		Zoom		Zoom / Size
		Resume		Text / Goto
		Stop		Stop / Hold
		Pause		Pause / Step / Freeze
		Play		Play / Slow
		A-B		Yellow / YouTube / Repeat
		<< / Memo		<< / Tune-
		>> / Auto		>> / Tune+
		I<< / Down		I<< / Preset-
		>>I / Up		>>I / Preset+

