



Original		Recharge		Original		Recharge	
	Power Tv		Shift + Power		1		1
	Tv/AV Tv		Shift + TV/Radio / Program		2		2
	Volume+ Tv		Vol+		3		3
	CH+ Tv		Shift + CH+ /		<<		<< / Tune-
	Volume- Tv		Vol-		>>		>> / Tune+
	CH- Tv		Shift + CH- /		4		4
	Power		Power		5		5
	OSD		Display / Media		6		6
	I< Index		I<< / Preset-		Stop		Stop / Hold
	Index >I		>>I / Preset+		7		7
	Timer Rec		Sleep / Timer		8		8
	Check		Smart / List		9		9
	Transmit		Subtitle / EQ		Input Select		AV / Input / RDS
	Play		Play / Slow		0		0
	SP/LP		Picture / Format		-/--		Guide / EPG / -/--
	Audio Out		Audio / Lang I/II		Menu		Menu / Home
	AV Link		TV/Radio /		Up/Trackin/V-Lock		Up





	Original	Recharge	Original	Recharge
	Exit	Exit / Cancel / Clear		
	Pause/Still	Pause / Step / Freeze		
	Slow	+  Shift + Play /		
	+	CH+ / Page+		
	Left/Display	Left		
	Store/Reset	OK		
	Right/Zero Stop	Right		
	Rec	Rec / Rec Mode		
	-	CH- / Page-		
	Down/Tracking/V-Lock-	Down		

