























































 











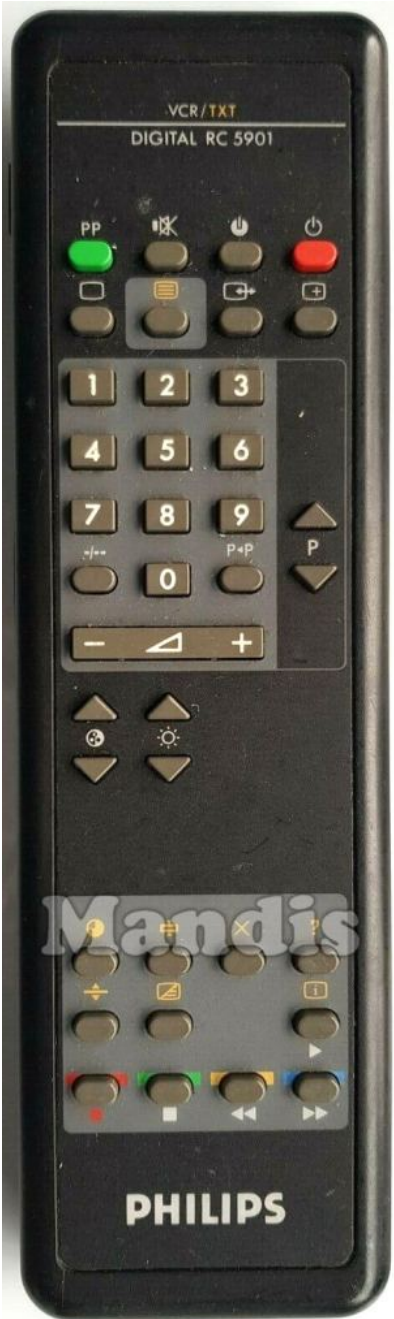











| Original | | Rechange | | Original | | Rechange | |
|---|-------|---|------------------|---|------------|---|-----------------------|
|  | PP |  | Back / Return |  | P+ |  | CH+ / Page+ |
|  | Mute |  | Mute / Dimmer |  | -/-- |  | Guide / EPG / -/-- |
|  | (I) |  | OK |  | 0 |  | 0 |
|  | Power |  | Power |  | P<P |  | Fav / Marker / PC |
|  | [] |  | Display / Media |  | P- |  | CH- / Page- |
|  | [=] |  | Text / Goto |  | Vol- |  | Vol- |
|  | [↔] |  | AV / Input / RDS |  | Vol+ |  | Vol+ |
|  | [+] |  | Smart / List |  | Colour+ |  | Right |
|  | 1 |  | 1 |  | Brighness- |  | Down |
|  | 2 |  | 2 |  | Colour- |  | Left |
|  | 3 |  | 3 |  | Brighness+ |  | Up |
|  | 4 |  | 4 |  | ● |  | Setup / OPT / |
|  | 5 |  | 5 |  | □ |  | Stop / Hold |
|  | 6 |  | 6 |  | X |  | Exit / Cancel / Clear |
|  | 7 |  | 7 |  | [?] |  | D.Menu / Top |
|  | 8 |  | 8 |  | ◆ |  | Zoom / Size |
|  | 9 |  | 9 |  | [/ =] |  | Sleep / Timer |



 

 



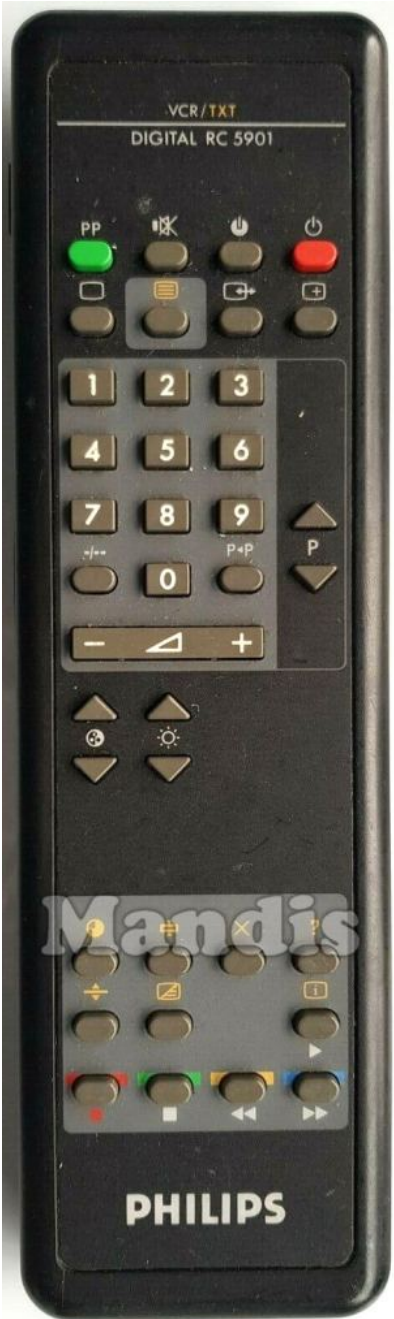
































































| Original | Recharge | Original | Recharge |
|---|---|----------|----------|
|  |  Info / Angle | | |
|  |  Red / Netflix / Search | | |
|  |  Green / APP / Repeat | | |
|  |  Yellow / YouTube / Repeat | | |
|  |  Blue / Prime Video / Random | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |







| Original | | Rechange | | Original | | Rechange | |
|---|-------|---|------------------|---|------|---|-----------------------|
|  | PP |  | Back / Return |  | -/-- |  | Guide / EPG / -/-- |
|  | Mute |  | Mute / Dimmer |  | 0 |  | 0 |
|  | (I) |  | OK |  | P<P |  | Fav / Marker / PC |
|  | Power |  | Power |  | P- |  | CH- / Page- |
|  | [] |  | Display / Media |  | Vol- |  | Vol- |
|  | [↔] |  | AV / Input / RDS |  | Vol+ |  | Vol+ |
|  | [+] |  | Smart / List |  | ● |  | Setup / OPT / |
|  | 1 |  | 1 |  | □ |  | TV/Radio / |
|  | 2 |  | 2 |  | X |  | Exit / Cancel / Clear |
|  | 3 |  | 3 |  | ? |  | D.Menu / Top |
|  | 4 |  | 4 |  | Size |  | Zoom / Size |
|  | 5 |  | 5 |  | [=] |  | Text / Goto |
|  | 6 |  | 6 |  | [/=] |  | Sleep / Timer |
|  | 7 |  | 7 |  | Play |  | Play / Slow |
|  | 8 |  | 8 |  | Rec |  | Rec / Rec Mode |
|  | 9 |  | 9 |  | Stop |  | Stop / Hold |
|  | P+ |  | CH+ / Page+ |  | << |  | << / Tune- |

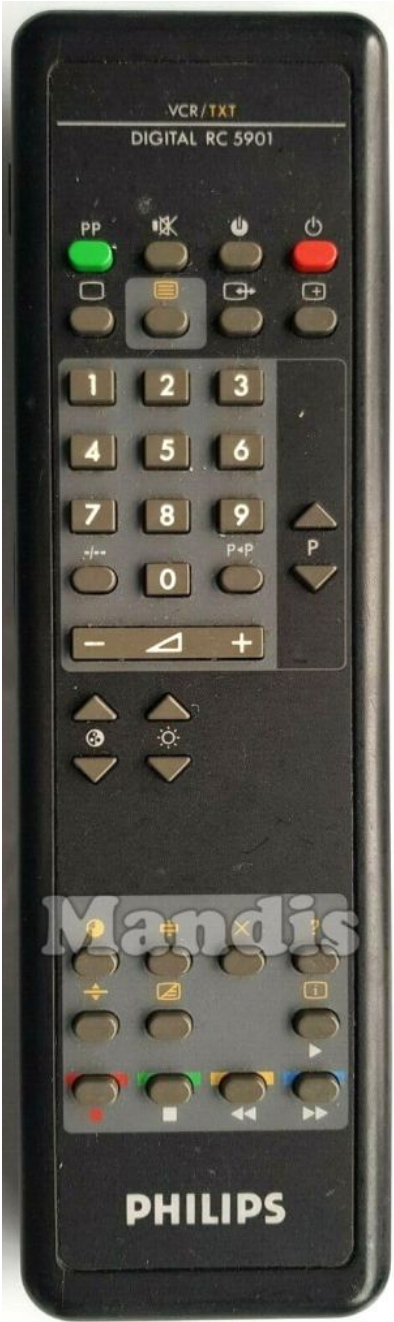



| Original | Recharge | Original | Recharge |
|--|--|----------|----------|
|  >> |  >> / Tune+ | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

