 

 

 

 

 

 

 

 

 

 

 


























 







 
 

 

 
 


Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Lang	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Game	 Picture / Format
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return

Original	Rechange
 Dev.List	 Display / Media
 EPG	 Guide / EPG / -/-
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Auto	 Setup / OPT /
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 Enter	 OK
 Right	 Right
 Vol+	 Vol+
 CH-	 CH- / Page-





Original	Recharge
 Down	 Down
 Filelist	 Smart / List
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Red/FAV./Daily	 Red / Netflix / Search
 Green/Del./Weekl	 Green / APP / Repeat
 Yellow/Move/P.Inf	 Yellow / YouTube / Repeat
 Blue/Look/Timer	 Blue / Prime Video / Random

Original	Recharge

