



Original		Rechange		Original		Rechange	
	Power		Power		5		5
	Back		Back / Return		6		6
	Mode		Menu / Home		7		7
	CH-		CH- / Page-		8		8
	CH+		CH+ / Page+		9		9
	EQ		Subtitle / EQ				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Vol-		Vol-				
	Vol+		Vol+				
	0		0				
	1		1				
	2		2				
	3		3				
	4		4				

