

 

 

 

 

 

 



 




 



 
 





 



 





 

 

 
 


 



 

 
 



 






 
 

 






 

 
 





Original		Rechange		Original		Rechange	
	Power		Power		9		9
	Open/Close		Eject / Surround		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Tv/DVD		TV/Radio /
	DVD		Shift + 2		0		0
	HDD		Shift + 7		Mute Tv		Mute / Dimmer
	AV		AV / Input / RDS		Vol- Tv		Vol-
	AV Tv		Smart / List		Display		Display / Media
	1		1		Text		Text / Goto
	2		2		Tv/Radio		Shift + TV/Radio / Program
	3		3		Rec		Rec / Rec Mode
	PR+ Tv		Shift + CH+ /		Zoom		Zoom / Size
	4		4		Repeat		Shift + Green / APP /
	5		5		<<		<< / Tune-
	6		6		>>		>> / Tune+
	PR- Tv		Shift + CH- /		I<<		I<< / Preset-
	7		7		>>I		>>I / Preset+
	8		8		Pause		Pause / Step / Freeze





Original	Rechange	Original	Rechange
 Play	 Play / Slow	 Marker	 Fav / Marker / PC
 Stop	 Stop / Hold	 Search	 Shift + Red / Netflix /
 Home	 Shift + Menu /	 Dubbing	 D.Menu / Top
 Up	 Up	 Clear	 Exit / Cancel / Clear
 PR+	 CH+ / Page+	 Titre	 Setup / OPT /
 Menu/List	 Menu / Home	 Thumbnail	 Sound / Title
 Left	 Left	 Random	 Shift + Blue / Prime
 Enter	 OK	 CHP.ADD	 Picture / Format
 Right	 Right	 PIP	 Audio / Lang I/II
 Guide	 Guide / EPG / -/--	 Showview	 Subtitle / EQ
 PR-	 CH- / Page-		
 Down	 Down		
 Return	 Back / Return		
 Red/FAV	 Red / Netflix / Search		
 Green/Audio	 Green / APP / Repeat		
 Yellow/Subtitle	 Yellow / YouTube / Repeat		
 Blue/Timeshift	 Blue / Prime Video / Random		

