



Original	Recharge	Original	Recharge
Title Del	+  1 Shift + 1	TV Channel-	+  - Shift + CH- /
Level Meter	+  2 Shift + 2	7	7 7
Motion Sensor	+  3 Shift + 3	8	8 8
Power Audio	Power	9	9 9
Display Chara	+  4 Shift + 4	Karaoke Setting	SMART Smart / List
Eco Dimmer	+  Shift + Mute / Dimmer	10	Guide / EPG / -/-
Tv/Video	TV/Radio /	10	Sleep / Timer
Power Tv	+  Shift + Power	0	0 0
1	1 1	0	+  0 Shift + 0
2	2 2	+10	Fav / Marker / PC
3	3 3	+10	+  Shift + Sleep / Timer
MIC Vol+	+  Shift + Up	Mic Mix	+  Shift + Smart / List
TV Channel+	+  Shift + CH+ /	Karaoke Scoring	+  Shift + AV / Input / RDS
4	4 4	Reserve	+  Shift + Green / APP /
5	5 5	Vocal Masking	+  Shift + Red / Netflix /
6	6 6	Vocal Support	+  Shift + Subtitle / EQ
MIC Vol-	+  Shift + Down	Top Menu/PG	D.Menu / Top





Original	Rechange
Menu/PL	Menu / Home
Cancel	Exit / Cancel / Clear
Audio Vol+	Vol+
Tv Vol+	Shift + Right
Up	Up
Left	Left
Enter/Set	OK
Right	Right
Down	Down
Audio Vol-	Vol-
Tv Vol-	Shift + Left
On Screen	Display / Media
Set Up	Setup / OPT /
Fade Muting	Mute / Dimmer
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Rechange
Back/Tuner/Play Mode	Back / Return
Return	Shift + Back / Return
I<<	I<< / Preset-
I<< Group Title Skip	Shift + I<< / Preset-
>>I	>>I / Preset+
Group Title Skip >>I	Shift + >>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Group Title >>	Shift + >> /
Play/Pause	Red / Netflix / Search
Play/Pause USB	Shift + Play /
FM Tuner	Shift + 6
Tuner AM	Blue / Prime Video / Random
Audio/MPX	Audio / Lang I/II
Subtitle	Subtitle / EQ
Zoom	Zoom / Size
Angle	Info / Angle





