

 

 

 

 

 



 



 

 





 





 









 







 

 

 







 

 







| Original | Recharge |
|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  Sleep |  Sleep / Timer |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  FAV |  Fav / Marker / PC |
|  0 |  0 |
|  Recall |  Back / Return |
|  - [/] - P.STD |  Smart / List |
|  - [I] - S.STD |  Sound / Title |

| Original | Recharge |
|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  Source |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Vol+ |  Vol+ |
|  Down |  Down |
|  Program+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Program- |  CH- / Page- |
|  Exit |  Exit / Cancel / Clear |
|  Info |  Info / Angle |
|  Aspect |  Picture / Format |
|  I/II |  Audio / Lang I/II |
|  [/ =] / Mix |  Subtitle / EQ |
|  [= x] / Cancel |  TV / Radio / |



