



Original	Rechange
 Power	 Shift + Power
 AMP Power	 Power
 CD	 Shift + 3
 Tuner	 Shift + 6
 Network	 Shift + Fav / Marker / PC
 Phono	 Shift + 4
 Recorder 1	 Shift + 5
 Recorder 2	 Shift + 7
 I<<<	 I<<< / Preset-
 >>>	 >>> / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Input	 Display / Media
 Source Direct	 AV / Input / RDS
 Volume+	 Vol+
 Info	 Info / Angle

Original	Rechange
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Time/Top Menu	 D.Menu / Top
 Mode	 Zoom / Size
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Prog/Favorites	 Fav / Marker / PC
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6







 






 

 
 



 

Original		Recharge	
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Dimmer	+	Shift + Mute / Dimmer
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Repeat		Yellow / YouTube / Repeat

Original		Recharge	



 



 



 

 

 

 




 






 
 


Original	Rechange
 Power	 Shift + Power
 AMP Power	 Power
 CD	 Shift + 3
 Tuner	 Shift + 6
 Network	 Shift + Fav / Marker / PC
 Phono	 Shift + 4
 Recorder1	 Shift + 5
 Recorder2	 Shift + 7
 Pitch Control-	 CH- / Page-
 Reset	 Back / Return
 Pitch Control+	 CH+ / Page+
 I<<	 I<< / Preset-
 Sound Mode	 Sound / Title
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Rechange
 Input	 Display / Media
 Source Direct	 AV / Input / RDS
 Volume+	 Vol+
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Time/Top Menu	 D.Menu / Top
 Mode	 Zoom / Size
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Prog/Favorites	 Fav / Marker / PC
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2





Original	Rechange
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Clear	 Exit / Cancel / Clear
 Dimmer	 Shift + Mute / Dimmer
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Repeat	 Yellow / YouTube / Repeat

Original	Rechange

