



Original		Rechange		Original		Rechange	
	Power		Power		Setup		Setup / OPT /
	Mute		Mute / Dimmer		Title/TTX		Text / Goto
	Play		Play / Slow		Source		AV / Input / RDS
	Pause		Pause / Step / Freeze		Menu/PBC		Menu / Home
	Stop		Stop / Hold		Up		Up
	Rec		Rec / Rec Mode		Left/FAV-		Left
	<<		<< / Tune-		Enter		OK
	>>		>> / Tune+		Right/FAV+		Right
	I<<		I<< / Preset-		Clear		Exit / Cancel / Clear
	>>I		>>I / Preset+		Down		Down
	L/R		Sound / Title		Return		Back / Return
	Language		Audio / Lang I/II		Vol+		Vol+
	Subtitle		Subtitle / EQ		N/P		Smart / List
	Open/Close		Eject / Surround		Vol-		Vol-
	Zoom		Zoom / Size		OSD		Display / Media
	Time		Sleep / Timer		1		1
	TV/Radio		TV/Radio /		2		2





	Original	Recharge	Original	Recharge
3	3	CD - STB 3		
4	4	VIDEO 4		
5	5	TAPE 5		
6	6	TUNER 6		
7	7	AUX - HDD 7		
8	8	USB 8		
9	9	BLUETOOTH 9		
+10	+10	GUIDE EPG		
+10	0/10	HDMI - SAT 0		
REPEAT	Repeat	APP REPEAT		
A-B	A-B	YouTube REPEAT A-B		
ANGLE /DEL	Angle/Del	Prime Video RANDOM		
SLOW	Slow	SHIFT + SLOW		
STEP	Step	SHIFT + STEP - FREEZE		
VIDEO	Video	SHIFT + VIDEO 4		
PROG/EPG	Prog/EPG	SHIFT + GUIDE EPG		

