





| Original | Recharge |
|--|---|
|  Power |  Power |
|  Freeze |  Pause / Step / Freeze |
|  Auto Setup |  Setup / OPT / |
|  Shutter |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Index Window |  Smart / List |
|  D.Zoom+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  STD |  Display / Media |
|  D.Zoom- |  CH- / Page- |
|  Input Video |  4 |

| Original | Recharge |
|---|--|
|  Input RGB |  Guide / EPG / -/-- |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

