







 



 



 









 











	Original	Rechange	Original	Rechange
	Power			
	Bluetooth / AUX			
		7		
	Bluetooth / AUX			
		9		
	1			
		1		
	2			
		2		
	3			
		3		
	4			
		4		
	5			
		5		
	6			
		6		
	Vol+			
		+		
	Play / Pause			
		▶		
	Play / Pause			
	Vol-			
		-		
	I<<			
		⏮		
	>>I			
		⏭		
	Dislike			
		-		
	Like			
		+		

