



 





 

 

 





 

 

 






 

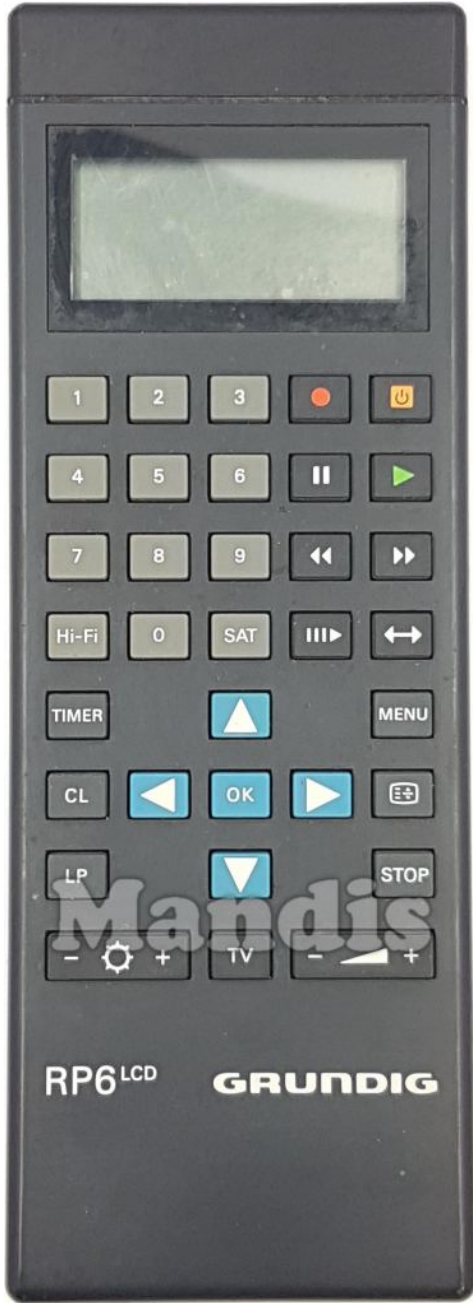




Original	Rechange
 1	 1
 2	 2
 3	 3
 Rec	 Rec / Rec Mode
 Power	 Power
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 7	 7
 8	 8
 9	 9
 <<	 << / Tune-
 >>	 >> / Tune+
 Hi-Fi	 Audio / Lang I/II
 0	 0



Original	Rechange
 SAT	 Shift + 0
 III>	 >>I / Preset+
 ↔	 Smart / List
 Up	 Up
 Menu	 Menu / Home
 CL	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 [=◇]	 TV/Radio /
 LP	 Picture / Format
 Down	 Down
 Stop	 Stop / Hold
 * -	 CH- / Page-
 * +	 CH+ / Page+
 TV	 Shift + 1
 Vol-	 Vol-





Original

Recharge

Original		Recharge	
	Vol+		Vol+

Original

Recharge

Original	Recharge

