



 















 





 



 



 
















 

 










 
 















 



 

 
 


 
 




Original		Rechange		Original		Rechange	
	TV/R		TV/Radio /		9		9
	Power		Power		Yellow/Zoom		Yellow / YouTube / Repeat
	Mute		Mute / Dimmer		Recall		Back / Return
	Display		Display / Media		0		0
	Mode		Picture / Format		SAT		Shift + 0
	Time		Shift + Sleep / Timer		Blue/Info		Blue / Prime Video / Random
	F1		Smart / List		Menu		Menu / Home
	1		1		Exit		Exit / Cancel / Clear
	2		2		Up/CH+		Up
	3		3		Left/Vol-		Left
	Red/Audio		Red / Netflix / Search		OK		OK
	4		4		Right/Vol+		Right
	5		5		Down/CH-		Down
	6		6		SUB		Subtitle / EQ
	Green/Pause		Green / APP / Repeat		TXT		Text / Goto
	7		7		EPG		Guide / EPG / -/-
	8		8		FAV		Fav / Marker / PC





Original		Recharge		Original		Recharge	
	Vol+		Vol+				
	Find		D.Menu / Top				
	[+]		Zoom / Size				
	Page Up		CH+ / Page+				
	Vol-		Vol-				
	Sleep		Sleep / Timer				
	USB		Shift + 8				
	Page Down		CH- / Page-				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Play		Play / Slow				
	Stop		Stop / Hold				
	Skip Prev.		I<< / Preset-				
	Skip Next		>>I / Preset+				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				

