










 











 


























Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/R
 0	 0
 ←PR	 Back
 EPG	 Guide
 Up	 Up
 PR+	 Ch +

Original	Rechange
 Menu	 Menu
 Left	 Left
 Vol-	 Vol -
 OK/List	 Ok
 Right	 Right
 Vol+	 Vol +
 FAV	 Pre Ch
 PR-	 Ch -
 Down	 Down
 Exit	 Exit
 Red/Find	 Red
 ↑/Page+	 3D
 Green/Zoom	 Green
 ↓/Page-	 Format
 Yellow	 Yellow
 Text	 Text
 Pause	 Pause





Original	Rechange
 Blue	 Blue
 Audio L/R	 Dual
 Info	 Info
 Tv/AV	 AV
 Sleep	 Sleep
 [+]	 Options
 Record	 Rec
 Play	 Play
 Stop	 Stop
 Shift	 Media
 << Fast	 <<
 Fast >>	 >>
 < Slow	 I<<
 Slow >	 >>I

Original	Rechange

