



Original	Recharge
 Power	 Power
 Source	 AV / Input / RDS
 USB	 Shift + 8
 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround
 Tools	 Shift + Setup / OPT / Tools
 Select	 OK
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Disc Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 Shift + OK
 Right	 Right
 Down	 Down
 Back	 Back / Return

Original	Recharge
 Display	 Display / Media
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Tv Vol+	 Vol+
 Tv Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Tv Vol-	 Vol-
 P-	 CH- / Page-
 1	 1
 0	 0
 3	 3





Original		Rechange		Original		Rechange	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	2		2				
	Audio		Audio / Lang I/II				
	Rec Mode		Shift + Rec / Rec Mode				
	Timer		Sleep / Timer				
	Edit		Zoom / Size				
	Showview		Smart / List				

